



contents

eatures	2
pecifications	3
Dimensions	5
Vorking Range Bifold	6
oad Charts	7
Vorking Range	8
Bifold & Inserts .oad Charts	10
oad Handling	11

features

- 75 ton (68 mt) capacity
- 41 ft-128 ft (12.6 m-39.0 m)
 4 section, full power boom
- 33 ft-56 ft (10.0 m-17.0 m) offsettable lattice swingaway extension
- 20 ft (6.1 m) or 40 ft (12.2 m) extension inserts
- Grove MEGAFORM[™] boom
- 18,000 lb (8 165 kg) hydraulic removable counterweight

Crane Group

 275 bhp (205 kW) Tier III Cummins diesel engine

Rough Terrain Hydraulic Crane

features

2





• Max. tip height of 232 ft. (70.6 m) w/56 ft. (17.0 m) bi-fold • Electronically controlled Cummins diesel and (2) 20 ft. (6.1 m) inserts.

• The Grove MEGAFORM[™] boom shape eliminates weight and increases capacity compared to conventional shapes.



• For improved operator comfort and visibility of the boom load the cab can be tilted up to 20°.



engine provides plenty of power at the jobsite.



specifications

Superstructure

Boom

41 ft. - 128 ft. (12.6 m - 39.0 m) four-section, sequenced synchronized full power boom. Maximum tip height: 138 ft. (41.9 m).

Lattice Extension

33 ft.-56 ft. (10.0 m-17 m) offsettable bifold lattice swingaway extension. Offsets 0°, 20°, and 40°. Stows alongside base boom section. Maximum tip height: 192 ft. (58.6 m).

*Optional Lattice Extension Inserts

(2) x 20 ft. (6.1 m) lattice extension inserts. Installs between the boom nose and bifold extension, non-stowable. Maximum tip height: 232 ft. (70.6 m).

Boom Nose

Four nylatron sheaves mounted on heavy-duty tapered roller bearings with removable pin-type rope guards. Quick-reeving type boom nose. Removable auxiliary boom nose with removable pin type rope guard.

Boom Elevation

One double-acting hydraulic cylinder with integral holding valve provides elevation from -3° to $+78^{\circ}$.

Load Moment & Anti-Two Block System

Standard "Graphic Display" load moment and anti-two block system with audio-visual warning and control lever lockout. These systems provide electronic display of boom angle, length, radius, tip height, relative load moment, maximum permissible load, load indication and warning of impending two-block condition. The standard Work Area Definition System allows the operator to pre-select and define safe working areas. If the crane approaches the pre-set limits, audio-visual warnings aid the operator in avoiding job-site obstructions.

🕒 'Cab

Full-vision, all-steel fabricated with acoustical lining and tinted safety glass throughout. Cab tilts to +20 degrees. Deluxe seat incorporates armrest-mounted hydraulic single-axis controllers. Dash panel incorporates gauges for all engine functions. Other standard features include: hot water heater, cab circulating air fan, sliding side and rear windows, sliding skylight with electric wiper and sunscreen, electric windshield wash/wipe, fire extinguisher and seat belt.

t Swing

Two speed, planetary swing drive with foot-applied multi-disc wet brake. Spring applied, hydraulically-released swing brake. Single position mechanical house lock, operated from cab. Maximum speed: 2.0 RPM.



18,000 lbs. (8 165 kg). Hydraulically installed and removed.

Hydraulic System

Two main pumps ([1] piston and [1] gear) with a combined capacity of 133 GPM (503 LPM).

Maximum operating pressure: 4000 psi (277.7 bar). Three section pressure compensated valve bank. Return line type filter with full flow by-pass protection and service indicator. Replaceable cartridge with micron filtration rating of 5/12/16. 263 gallon (995 L) hyd. reservoir. Carrier mounted oil cooler with thermostatically controlled hydraulic motor driven fan/air to oil. System pressure test ports.

Hoist Specifications (HP30-19G) Main and Auxiliary Hoist

Planetary reduction with automatic spring applied multi-disc wet brake. Electronic hoist drum rotation indicators and hoist drum cable followers.

Maximum Single Line Pull:

1st layers: 20,250 lb. (9 185 kg) 3rd layer: 17,010 lb. (7 715 kg) 5th layer: 14,660 lb. (6 650 kg)

Maximum Permissible Line Pull: 16,800 lb. (7 620 kg) with 6 x 37 class rope 16,800 lb. (7 620 kg) with 35 x 7 class rope

Maximum Single Line Speed: 514 FPM (156 m/min)

Rope Construction:

6 x 36 EIPS IWRC, Special Flexible 35 x 7 Flex-X, Rotation Resistant

Rope Diameter: 3/4" (19 mm)

Rope Length:	
Main Hoist:	600 ft. (182.8 m)
Auxiliary Hoist:	600 ft. (182.8 m)
Maximum Rope Stowage:	841 ft. (256 m)

*Denotes optional equipment



3

specifications

Carrier

() Chassis

Box section frame fabricated from high-strength, low alloy steel. Front/rear towing and tie down lugs.

- Outrigger System

Four hydraulic telescoping single-stage double box beam outriggers with inverted jacks and integral holding valves. Three position setting, 0%, 50% and fully extended. All steel fabricated, quick-release type round outrigger floats, 30.5 in. (775 mm) diameter. Maximum outrigger pad load: 125,000 lb. (56 700 kg).

Utrigger Controls

Controls and crane level indicator located in cab.

Engine (Tier III)

Cummins QSB 6.7L diesel, six cylinders, 275 bhp (205 kW) (Gross) @ 2,500 rpm. Maximum torque: 728 ft. lbs. (987 Nm) @ 1,500 RPM.

Fuel Tank Capacity

72 gallons (273 L)

O Transmission

Full rangeshift with 6 forward and 6 reverse speeds. Front axle disconnect for 4×2 travel.

4 Electrical System

Two 12-V maintenance free batteries. 12-V starting and lighting. Battery disconnect. CanBus Diagnostic system.



4 x 4

T Steering

Fully independent power steering:
Front: Full hydraulic, steering wheel controlled.
Rear: Full hydraulic, switch controlled.
Provides infinite variations of 4 main steering modes: front only, rear only, crab and coordinated.
Rear steer indicator.
Turning radius - 25 ft.

+ Axles

Front: Drive/steer with differential and planetary reduction hubs rigid-mounted to frame. Rear: Drive/steer with differential and planetary

Oscillation Lockouts

Automatic full hydraulic lockouts on rear axle permits 10 in. (25.4 cm) oscillation only with boom centered over the front.

reduction hubs pivot-mounted to frame.

O Brakes

Full hydraulic split circuit brakes operating on all wheels. Springapplied, hydraulically released parking brake mounted on front axle.



```
Std. 29.5 x 25 - 34 bias ply, General.
```

Lights

Full lighting including turn indicators, head, tail, brake and hazard warning lights.

W Maximum Speed

22 MPH (35 kph).

🗺 Gradeability (Theoretical)

75% (Based on 108,158 lb. [49 060 kg] GVW) 29.5 x 25 tires, 128 ft. (39.0 m) boom, plus 56 ft. (17.0 m) swingaway, 18,000 lb. (8 165 kg) counterweight, 75T hookblock and 10T headache ball).

Miscellaneous Standard Equipment

Full width steel fenders, full length aluminum decking, dual rear view mirrors, hookblock tiedown, electronic back-up alarm, light package, front stowage well, tachometer/hourmeter, rear wheel position indicator, 36,000 BTU hot water cab heater, hoist mirrors, engine distress A/V warning system, front/rear tie down and two lugs, coolant sight level indicator.

*Optional Equipment


*Auxiliary Lighting Package (includes cab mounted amber flashing light, hoist mounted work light, and dual base boom mounted floodlights.)
*LMI light bar (in cab)
*Air Conditioning (28,500 BTU)
*360 degree NYC style mechanical swinglock
*Rear Pintle hook
*Cab controlled cross axle differential locks, (front and rear)
*PAT data logger
*Rubber mat for stowage trough


*Denotes optional equipment






dimensions

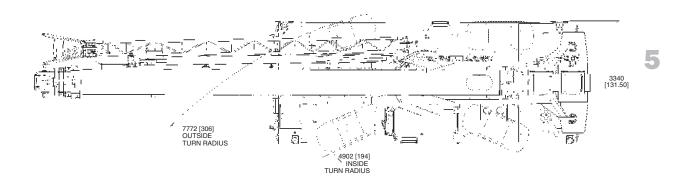

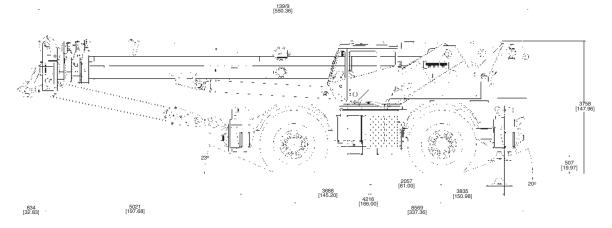

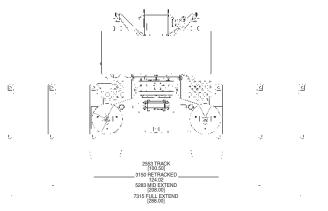



Weights


	GVW		Front		Rear	
	lb.	kg	lb.	kg	lb.	kg
RT875E Basic Machine						
Basic Machine including 128 ft. main boom, main and aux. hoist with 600 ft. of rope, 56' (17 m) bifold swingaway, full counterweight, 10T headache ball, and 75T hookblock:	108,158	49 060	53,888	24 444	54,270	24 617
Remove counterweight and aux. hoist. 56' (17 m) bifold.	87,917	39 879	63,520	28 813	24,397	11 066
Remove counterweight, aux. hoist, and 56' (17 m) bifold swingaway.	85,285	38 685	58,725	26 638	26,560	12 048





working range

Working range diagram with bi-fold extension

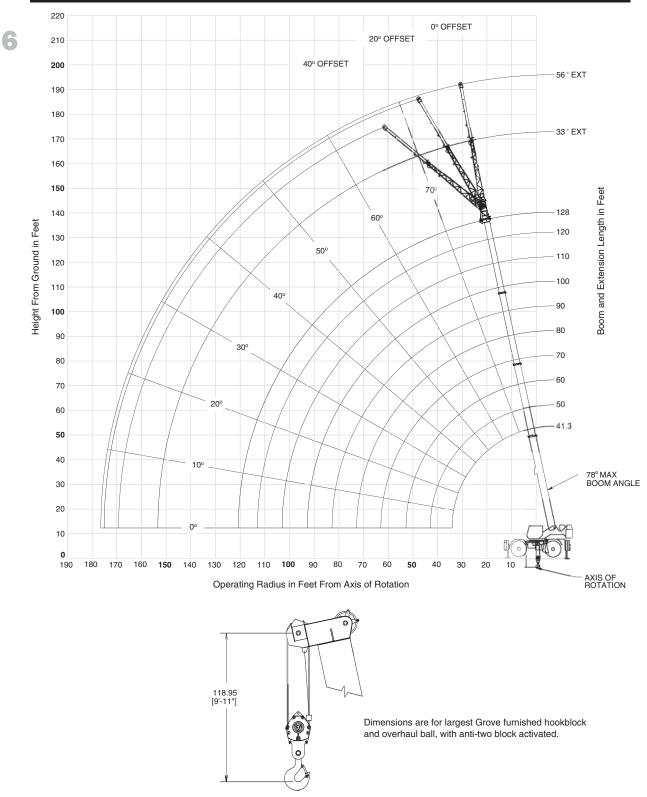


RT875E

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

GROVE.

RT875E load chart

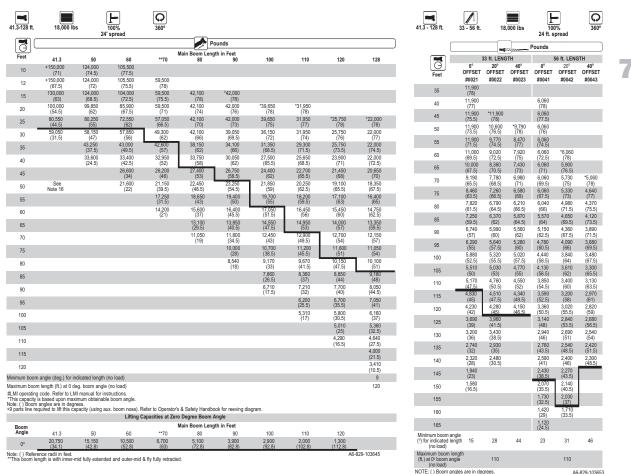

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instruction *This canacity is based upon maximum boom angle.

NOTES:


- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.
- 2. The 33 ft. extension length may be used with single or double part line lifting service. The 56 ft. extension length may be used for single line lifting service only.
- 3. For main boom lengths less than 128 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use the rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.
- 7. When lifting over the main boom nose with 33 ft. or 56 ft. extension erected, the outriggers must be fully extended or 50% extended (17 ft. 4 in. spread).

875

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.




working range

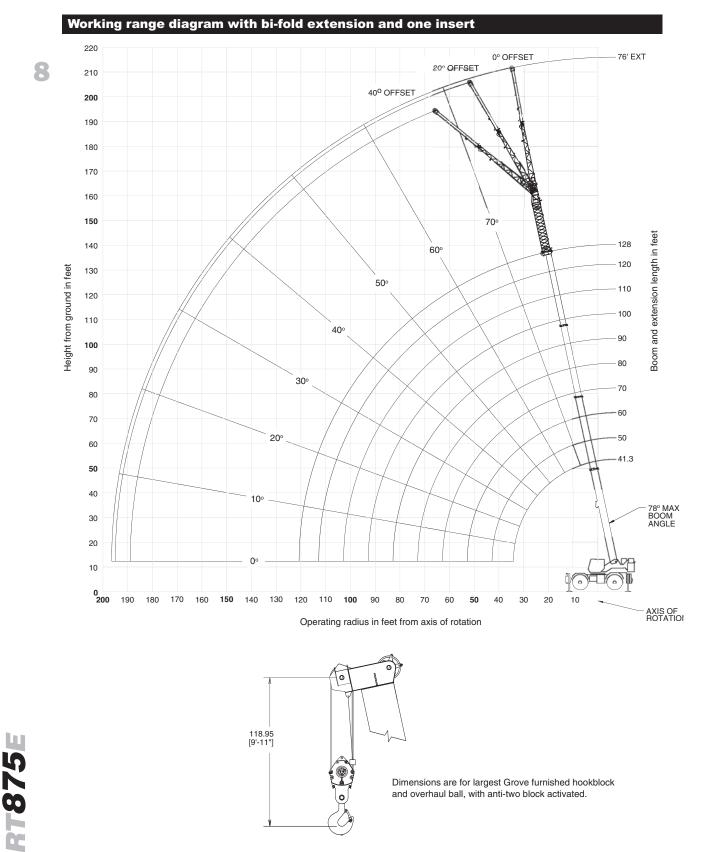

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

FROVE

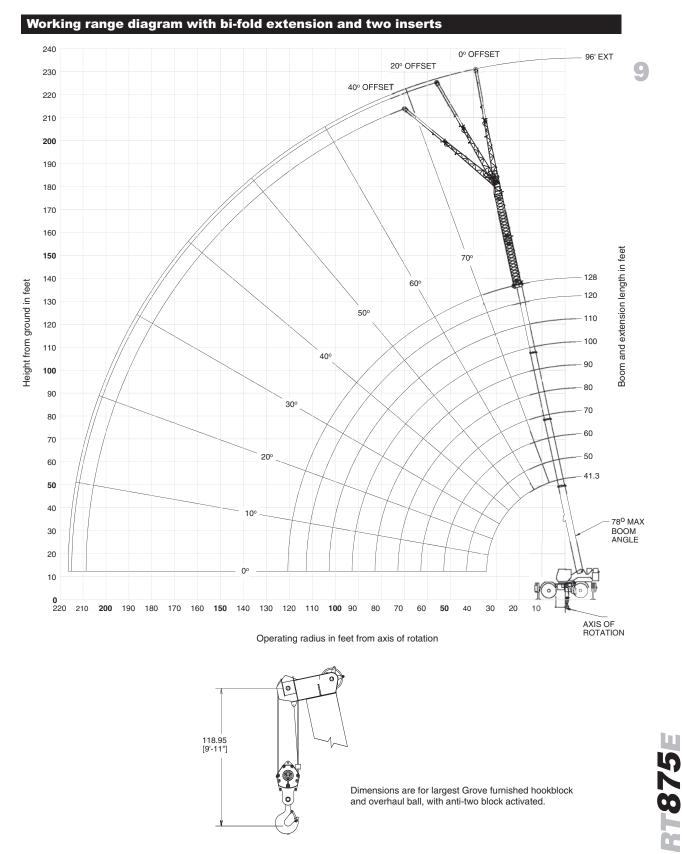

working range

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

RT875E load chart

	41.3-128 ft.	33-56 ft.	20 ft. inse	ert 18,0	00 lbs 25	100% ft. spread	Q 360°
		[meter		Pounds		
0	Feet	76 ft. (56 ft. 0° OFFSET #0084			96 ft. (56 ft. 0° OFFSET #0084	LENGTH + 2 20° OFFSET #0085	INSERTS) 40° OFFSET #0086
	50	4,850 (78)					
	55	4,850 (77.5)			3,520 (78)		
	60	4,850 (76)			3,520 (77.5)		
	65	4,850 (74.5)	*5,290 (78)		3,520 (76.5)		
	70	4,850 (73)	4,860 (77.5)		3,520 (75)		
	75	4,850 (71.5)	4,470 (76)		3,520 (73.5)	3,740 (78)	
	80	4,730 (70)	4,110 (74.5)	*4,050 (78)	3,520 (72.5)	3,420 (76.5)	
	85	4,310 (68.5)	3,790 (73)	3,500 (76.5)	3,300 (71)	3,100 (75)	*3,250 (78)
	90	3,940 (67)	3,500 (71)	3,260 (75)	2,970 (69.5)	2,820 (73.5)	2,720 (77)
	95	3,610 (65.5)	3,240 (69.5)	3,030 (73)	2,660 (68)	2,560 (72)	2,490 (75.5)
	100	3,310 (64)	3,000 (68)	2,830 (71.5)	2,390 (66.5)	2,320 (71)	2,270 (74)
	105	3,040 (62)	2,770 (66)	2,630 (69.5)	2,140 (65)	2,100 (69.5)	2,070 (72)
	110	2,790 (60.5)	2,570 (64.5)	2,450 (68)	1,920 (63.5)	1,900 (68)	1,890 (70.5)
	115	2,560 (58.5)	2,370 (62.5)	2,280 (66)	1,710 (62)	1,710 (66.5)	1,710 (69)
	120	2,350 (57)	2,200 (61)	2,120 (64)	1,520 (60.5)	1,540 (64.5)	1,550 (67.5)
	125	2,160 (55)	2,030 (59)	1,970 (62)	1,350 (59)	1,380 (63)	1,390 (66)
	130	1,990 (53)	1,880 (57)	1,830 (60)	1,190 (57.5)	1,230 (61.5)	1,250 (64)
	135	1,820 (51.5)	1,730 (55)	1,700 (58)	1,040 (56)	1,080 (60)	1,110 (62.5)
	140	1,670 (49.5)	1,590 (53)	1,570 (56)			
	145	1,530 (47)	1,470 (51)	1,450 (53.5)			
	150	1,400 (45)	1,340 (49)	1,340 (51.5)			
	155	1,270 (43)	1,230 (46.5)	1,230 (48.5)			
	160	1,160 (40.5)	1,120 (44)	1,130 (46)			
	165	1,050 (38)	1,020 (41.5)				
	Minimum boom a (°) for indicate length (no load	d 36 d)	40	44	54	58	60
	Maximum boo length (ft.) at 0° b angle (no load NOTE: () Boom a	oom I)	70			60 A6-1	829-103655

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions. *This capacity is based upon maximum boom angle. RT875E - S/N 223983 A6-829-103655

NOTES:

1(

- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads in accordance with SAF J-765
- 2. The 56 ft. boom extension length may be used for single line lifting service only.
- 3. For main boom lengths less than 128 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. When lifting over the main boom nose with 56 ft. extension erected and inserts, the outriggers must be fully extended and vertical jacks set.

41.3-90 ft.	18,0	00 lbs	(L) Stationar) ע	Q 360°	
				Pounds		
			 #90			
G		м	ain Boom Le	ength in Feet		
Feet	41.3 49,200	50 40,750	60	*70	80	90
12	49,200 (67.5) 39,150	(72)				
15	(63)	35,700 (68.5)				
20	24,200 (54.5)	24,350 (62)	22,800 (67.5)	22,000 (71)		
25	16,200 (44.5)	16,200 (55)	15,600 (62)	15,950 (66.5)	15,850 (70)	
30	11,250 (31.5)	11,250 (47)	10,950 (56)	10,650 (62)	11,600 (66)	12,150 (69.5)
35		7,900 (37.5)	7,690 (49.5)	7,270 (57)	8,420 (62)	8,820 (66)
40		5,490 (24.5)	5,280 (42.5)	4,880 (52)	6,020 (58)	6,330 (62)
45		(24.0)	3,430	3,110	4,130	4,480
50			(34) 1,350 (22)	(46) 1,740	(53) 2,610 (48.5)	(58.5) 3,040 (54.5)
55			(22)	(39.5)	1.360	1,070
Minimum boo indicated leng	m angle (deo	a.) for	21	38.5	(43) 42	(50) 49
Maximum boo deg. boom an #LMI operatin Note: () Boon *This boom le retracted.	igle (no load) ig code. Refe n angles are ength is with) er to LMI mar in degrees. inner-mid full	y extended a	nd outer-mid	& fly fully	
Boom	Lifting (e Boom Angl ength in Feet		
Angle	41.3	50		-ingui in t oot		
0°	8,340 (34.1)	4,400 (42.8)	-			
Note: () Refer		feet.	Pick & Car Up to 2.5 m	rry Iph	A6-829-0	103649A
				Pounds		
			#9	006		
Feet				Length in F		
12	41.3 59,450 (67.5)	50 49,400	60	*70	80	90
15	(67.5) 49,650	(72)				
	(63)	(68.5) 37,800	36,850	29,750		
20	38,100 (54.5)	(62)	(67.5)	(71)		
25	30,000 (44.5)	29,700 (55)	29,200 (62)	29,700 (66.5)	24.450	
30	24,100 (31.5)	23,750 (47)	23,500 (56)	23,850 (62)	24,450 (66)	10.5
35		18,000 (37.5)	17,900 (49.5)	18,150 (57)	19,000 (62)	19,900 (66)
40		13,650 (24.5)	13,700 (42.5)	13,750 (52)	14,700 (58)	15,500 (62)
45			9,400 (34)	9,290 (46)	11,500 (53)	12,300 (58.5)
50			7,420 (22)	7,200 (39.5)	8,220 (48.5)	8,960 (54.5)
55				5,450 (31.5)	6,510 (43)	7,220 (50)
				0.070	E 060	5 740

3,970

5,060 (37)

3,810 (29.5)

2,720 (19)

80

2,170 (72.8) A6-829-0103650

5,740 (45.5)

4,460 (40.5)

3,350 (34.5)

2,380

(1,520 (18)

0

۹N

1,080 (82.8)

90

NOTES:

- 1. Capacities are in pounds and do not exceed 75% of tipping loads as determined by test in accordance with SAE J765.
- 2. Capacities are applicable to machines equipped with 29.6x25 (34 ply) General tires at 76 psi cold inflation pressure.
- 3. Capacities appearing above the bold line are based on structural strength and tipping should not be relied upon as a capacity limitation.
- 4. Capacities are applicable only with machine on firm level surface.
- 5. On rubber lifting with boom extensions not permitted.
- 6. For pick and carry operation, boom must be centered over front of machine, mechanical swing lock engaged and load restrained from swinging. When handling loads in the structural range with capacities close to maximum ratings, travel should be reduced to creep speeds. 7. Axle lockouts must be
- functioning when lifting on rubber.
- 8. All lifting depends on proper tire inflation, capacity and condition. Capacities must be reduced for lower tire inflation pressures. See lifting capacity chart for tire used. Damaged tires are hazardous to safe operation of crane.
- 9. Creep Not over 200 ft. of movement in any 30 minute period and not exceeding 1 mph.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

60

65

70

75

80

Boom Angle

41.3

Minimum boom angle (deg.) for indicated length (no load)

Maximum boom length (ft.) at 0 deg. boom angle (no load)

#LMI operating code. Refer to LMI manual for instructions. Note: () Boom angles are in degrees.

50

0° 19,400 10,250 6,460 3,17 (42.8) (52.8) (63 Note: () Reference radii in feet. *This boom length is with inner-mid fully extended and outer-mid & fly fully retracted.

Lifting Capacities at Zero Degree Boom Angle

60

Main Boom Length in Feet

*70

3,170 (63)

TROME.

Weight Reductions for	Load Handling Devices

33 FT56 FT. FOLDING BOOM EXTENSION	
*33 ft. Extension (Erected) -	3,700 lb.
*56 ft. Extension (Erected) -	7,830 lb.
*76 ft. (1 insert Erected) -	10,350 lb.
*96 ft. (2 inserts Erected) -	13,300 lb.
*Reduction of main boom capacities (no deduct required for stowed boom extension)	


When lifting over swingaway and/or jib combinations, deduct total weight of all load handling devices reeved over main boom nose directly from swingaway or jib capacity.

NOTE: All load handling devices and boom attachments are considered part of the load and suitable allowances MUST BE MADE for their combined weights. Weights are for Grove furnished equipment.

L	ine Pulls and Reeving	Informatio	on
Hoists	Cable Specs	Permissible Line Pulls	Nominal Cable Length
Main	3/4" (19 mm) 6x37 Class, EIPS, IWRC Special Flexible Min. Breaking Str. 58,800 lb.	16,800 lb.	600 ft.
Main & Aux.	3/4" (19 mm) Flex-X 35 Rotation Resistant (non-rotating) Min. Breaking Strength 85,800 lb.	16,800 lb.	607 ft.
	The approximate weight of 3/4" wire	rope is 1.5 lb./	ft.

Line Pulls and Reeving In	formation
AUXILIARY BOOM NOSE	136 lb.
HOOKBLOCK AND OVERHAUL BALL: 75 Ton, 4 Sheave 10 Ton, Overhaul Ball	1,275 lb.+ 568 lb. +
+Refer to rating plate for actual weight.	

Boom S	Sectio	on v	s. Se	ctio	n Ext	tensi	on P	erce	ntag	es
				Main E	loom L	ength i	n Feet			
	41.3	50	60	70	80	90	100	110	120	128
Boom section	ns:			Per	cent E	xtensio	n			
Inner-mid	0	30	65	100	100	100	100	100	100	100
Outer-mid	0	0	0	0	17	34	52	69	86	100
Fly	0	0	0	0	17	34	52	69	86	100

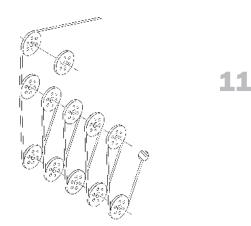

load handling

	Но	ist Performar	nce	
Wire Rope Layer	Hoist Line Two Speed Low		Drum Ro Capacity (15 in. l	(ft.)
	Available lb.*	Available lb.*	Layer	Total
1	20,250	9,610	101	101
2	18,490	8,770	110	211
3	17,010	8,070	120	331
4	15,750	7,470	129	460
5	14,660	6,960	139	599
	*Max. lifting ca	pacity: 6x37 or 35x7 cl	ass = 16,800 lb.	

Installation and Removal of Counterweight and Auxiliary Hoist					
	ng Capacities in Pounds ers Fully Extended – 360°				
Radius	LMI Code #0801				
in	Main Boom Length				
Feet	41.3 ft.*				
10	24,000				
12	24,000				
15	24,000				
20	24,000				
25	24,000				
30	24,000				
*The boon	n must be fully retracted.				

Working Area Diagram REAR AXLE OSCILLATION LOCKOUTS MUST BE SET TO MAINTAIN 360° - CENTERLINE OF OUTRIGGER CENTERLINE OF BOOM OVER SIDE 360° SUPPORT BOOM CENTERED OVER FRONT CAPACITIES ONGITUDINAL CENTERLINE OF CRANE CG OF OVER OVER REAR FRONT - SEE NOTE AT BOTTOM FRONT DIAGRAM FOR LIFTING ON OUTRIGGERS CENTERLINE OF ROTATION DIAGRAM FOR LIFTING ON TIRES OVER SIDE

Bold lines determine the limiting position of any load for operation within working areas indicated.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.







Manitowoc Crane Group - Americas Manitowoc, Wisconsin Facility Tel: [Int + 001] 920 684 6621 Fax: [Int + 001] 920 683 6277 Shady Grove, Pennsylvania Facility Tel: [Int + 001] 717 597 8121 Fax: [Int + 001] 717 597 4062 Manitowoc Crane Group - EMEA Europe Middle East & Africa Tel: [Int + 33] (0) 472 18 20 20 Fax: [Int + 33] (0) 472 18 20 00 Manitowoc Crane Group - UK Europe Middle East & Africa Tel: [Int + 44] (0) 191 565 6281 Fax: [Int + 44] (0) 191 564 0442 Manitowoc Crane Group - Germany (Sales, Parts & Service) Tel: [Int + 49](0) 2173 8909 0 Fax: [Int + 49] (0) 2173 8909-30 Manitowoc Crane Group - France France & Africa (Sales, Parts & Service) Tel: [Int + 33] (0) 1 303 13150 Fax: [Int + 33] (0) 1 303 86085 Manitowoc Crane Group - Netherlands (Sales, Parts & Service) Tel: [Int + 31] (0) 76 578 39 99 Fax: [Int + 31] (0) 76 578 39 78 Manitowoc Crane Group - Italy Italy & Southern Europe (Sales, Parts & Service) Tel: [Int + 39] (0) 331 49 33 11 Fax: [Int + 39] (0) 331 49 33 30 Manitowoc Crane Group - Portugal Portugal & Spain (Sales, Parts & Service) Tel: [Int + 351] (0) 22 968 08 89 Fax: [Int + 351] (0) 22 968 08 97 Manitowoc Crane Group - Singapore Asia/Pacific excl China (Sales, Parts & Service) Tel: [Int + 65] 6861 1733 Fax: [Int + 65] 6862 4040 / 4142 Manitowoc Crane Group - Shanghai China (Sales, Parts & Service) Tel: [Int + 86] (0) 21 64955555 Fax: [Int + 86] (0) 2164852038 Manitowoc Crane Group - Beijing China (Sales Parts & Service) Tel: [Int + 86] (0) 10 646 71690 Fax: [Int + 86] (0) 10 646 71691 Manitowoc Crane Group - Middle East (Sales) Tel: [Int + 971] (0) 4 348 4478 Fax: [Int + 971] (0) 4 348 4478 (Parts & Service) Tel: [Int + 973] (0) 9 660 899 Fax: [Int + 973] (0) 2 707 740

Distributed By:



www.manitowoccranegroup.com



Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories, and may not include all standard equipment.