




## **GR-550XL-3**

55 Ton Capacity (50.0 Metric Tons)

## **HYDRAULIC ROUGH TERRAIN CRANE**

## **DIMENSIONS**

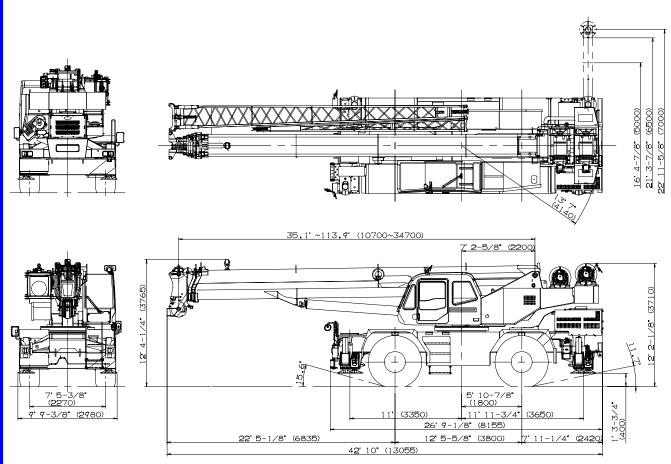

Note: Dimension is with boom angle at -0.8 degree.

( ) Reference dimensions in mm.

## GENERAL DIMENSIONS

(23.5 - 25 Tires)

,	,	
	Feet	Meters
Turning radius		
4 wheel steer	22'	6.7
2 wheel steer	38' 5"	11.7

Specifications are subject to change without notice.

• • • •

## CRANE SPECIFICATIONS

#### **BOOM**

Four section full power synchronized telescoping boom,  $35.1^{\circ} \sim 113.9^{\circ}$  ( $10.7 \text{ m} \sim 34.7 \text{ m}$ ), of round box construction with four sheaves, 17-5 /  $16^{\circ}$  (0.44 m) root diameter, at boom head. The synchronization system consists of telescope cylinder, two extension cables and retraction cables. Hydraulic cylinder fitted with holding valve. Two easily removable wire rope guards, rope dead end provided on both sides of boom head. Boom telescope sections are supported by wear pads both vertically and horizontally.

**BOOM ELEVATION** - By a double acting hydraulic cylinder with holding valve. Elevation -0.8°  $\sim$  81°, combination controls for hand or foot operation. Boom angle indicator. Automatic speed reduction and slow stop function. Elevating speed 20°  $\sim$  60° in 27 seconds.

JIB - Two stage bi-fold lattice type, 5°, 25° or 45° offset (tilt type). Single sheave, 15-5 / 8"(0.396 m) root diameter, at the head of both jib sections. Stored alongside base boom section. Jib length is 28.9' (8.8 m) or 50' (15.2 m). Assistant cylinders for mounting and stowing, controlled at right side of superstructure. Self stowing jib mounting pins.

### **AUXILIARY LIFTING SHEAVE (SINGLE TOP)**

Extension speed 78.8' in 72 seconds.

Single sheave, 15-5 / 8"(0.396 m) root diameter. Mounted to main boom head for single line work (stowable).

**ANTI-TWO BLOCK** - Pendant type over-winding cut out device with audio-visual (FAILURE lamp/BUZZER) warning system.

#### **SLEWING**

Hydraulic axial piston motor through planetary slewing speed reducer. Continuous 360° full circle slewing on ball bearing turn table at 2.7 min<sup>-1</sup>{rpm}. Equipped with manually locked / released slewing brake. A 360° positive slewing lock for pick and carry and travel modes, manually engaged in cab. Twin slewing system: Free slewing or lock slewing controlled by selector switch on front console.

### HOIST

MAIN HOIST - Variable speed type with grooved drum driven by hydraulic axial piston motor through speed reducer. Power load lowering and raising. Equipped with automatic brake (neutral brake) and counterbalance valve. Controlled independently of auxiliary hoist. Equipped with cable follower and drum rotation indicator.

DRUM - Grooved 14-1 / 4"(0.362 m) root diameter x 23-5 / 8" (0.6 m) wide. Wire rope: 633' of 3 / 4"diameter rope (193 m of 19 mm). Drum capacity: 997' (304 m) 7 layers. Maximum single line pull: 1st layer 16,500 lbs (7,480 kg). Maximum permissible line pull wire strength:15,600 lbs (7,085 kg).

AUXILIARY HOIST - Variable speed type with grooved drum driven by hydraulic axial piston motor through speed reducer. Power load lowering and raising. Equipped with automatic brake (neutral brake) and counterbalance valve. Controlled independently of main hoist. Equipped with cable follower and drum rotation indicator.

DRUM - Grooved 14-1 / 4"(0.362 m) root diameter x 23-5 / 8" (0.6 m) wide. Wire rope: 361' of 3 / 4"diameter rope (110 m of 19 mm). Drum capacity: 997' (304 m) 7 layers. Maximum single line pull: 1st layer 16,500 lbs (7,480 kg). Maximum permissible line pull wire strength:15,600 lbs (7,085 kg).

WIRE ROPE - Warrington seal wire, extra improved plow steel, preformed, independent wire rope core, right regular lay. 3 / 4"(19 mm) 6 X 31 class

#### **HOOK BLOCKS**

55 ton (50.0 metric ton) - 5 sheaves with swivel hook and safety latch, for 3 / 4"(19 mm) wire rope.(OPTIONAL) 6.2 ton (5.6 metric ton) - Weighted hook with swivel and Automatic Speed Reduction and Slow Stop function

#### **HYDRAULIC SYSTEM**

PUMPS - Two variable piston pumps for crane functions.

Tandem gear pump for steering, slewing and optional equipment.

Powered by carrier engine. Pump disconnect for crane is engaged / disengaged by rotary switch from operator's cab.

**CONTROL VALVES** - Multiple valves actuated by pilot pressure with integral pressure relief valves.

**RESERVOIR** - 148 gallon (560 lit.) capacity. External sight level gauge.

**FILTRATION** - BETA10=10 return filter, full flow with bypass protection, located inside of hydraulic reservoir. Accessible for easy replacement.

OIL COOLER - Air cooled fan type.

#### **CAB AND CONTROLS**

Both crane and drive operations can be performed from one cab mounted on rotating superstructure.

Left side, 1 man type, steel construction with sliding door access and safety glass windows opening at side. Door window is powered control. Windshield glass window and roof glass window are shatter-resistant. Tilt-telescoping steering wheel. Adjustable control lever stands for slewing, boom elevating, boom telescoping, auxiliary hoist and main hoist. Control lever stands can change neutral positions and tilt for easy access to cab. 3 way adjustable operator's seat with high back, headrest and armrest. Engine throttle knob. Foot operated controls: boom elevating, boom telescoping, service brake and engine throttle. Hot water cab heater and air conditioning.

Dash-mounted engine start / stop, monitor lamps, cigarette lighter, drive selector switch, parking brake switch, steering mode select switch, power window switch, pump engaged/ disengaged switch, slewing brake switch, telescoping / auxiliary hoist select switch, outrigger controls, free slewing / lock slewing selector switch, eco mode switch, and ashtray.

Instruments - Torque converter oil temperature, engine water temperature, air pressure, fuel, speedometer, tachometer, hour meter and odometer / tripmeter. Hydraulic oil pressure is monitored and displayed on the AML-C display panel.

Tadano electronic LOAD MOMENT INDICATOR system (AML-C) including:

- Control lever lockout function with audible and visual pre-warning
- · Boom position indicator
- · Outrigger state indicator
- Boom angle / boom length / jib offset angle / jib length / load radius / rated lifting capacities / actual loads read out
- Ratio of actual load moment to rated load moment indication
- Automatic Speed Reduction and Slow Stop function on boom elevation and slewing
- Working condition register switch
- Load radius / boom angle / tip height / slewing range preset function
- External warning lamp
- · Tare function
- Fuel consumption monitor
- · Main hoist / auxiliarly hoist select
- Drum rotation indicator (audible and visible type) main and auxiliary hoist

TADANO AML-C monitors outrigger extended length and automatically programs the corresponding "RATED LIFTING CAPACITIES" table

Operator's right hand console includes transmission gear selector, slewing lock lever and sight level bubble. Upper console includes working light switch, roof washer and wiper switch, emergency outrigger set up key switch, jib equipped / removed select switch, eco mode switch and air conditioning control switch.

NOTE: Each crane motion speed is based on unladen conditions.

## **CARRIER SPECIFICATIONS**

TYPE - Rear engine, left hand steering, driving axle 2-way selected type by manual switch, 4 x 2 front drive, 4 x 4 front and rear drive.

FRAME - High tensile steel, all welded mono-box construction.

**TRANSMISSION** - Electronically controlled full automatic transmission. Torque converter driving full powershift with driving axle selector. 6 forward and 2 reverse speeds, constant mesh.

4 speeds - high range - 2 wheel drive; 4 wheel drive 4 speeds - low range - 4 wheel drive

TRAVEL SPEED - 31 mph (50 km/h)

**AXLE** - Front: Full floating type, steering and driving axle with planetary reduction. Rear: Full floating type, steering and driving axle with planetary reduction and non-spin rear differential.

STEERING- Hydraulic power steering controlled by steering wheel. Three steering modes available: 2 wheel front, 4 wheel coordinated and 4 wheel crab.

**SUSPENSION** - Front: Semi-elliptic leaf springs with hydraulic lockout device. Rear: Semi-elliptic leaf springs with hydraulic lockout device.

**BRAKE SYSTEMS** - Service: Air over hydraulic disc brakes on all 4 wheels. Parking / Emergency: Spring applied-air released brake acting on input shaft of front axle. Auxiliary: Electropneumatic operated exhaust brake.

TIRES - 23.5-25(OR) • Air pressure: 65 psi (450 kPa)

OUTRIGGERS - Four hydraulic, beam and jack outriggers. Vertical jack cylinders equipped with integral holding valve. Each outrigger beam and jack is controlled independently from cab. Beams extend to 22'11-5 / 8" (7.0 m) center-line and retract to within 9' 9-3 / 8" (2.98 m) overall width with floats. Outrigger jack floats are attached thus eliminating the need of manually attaching and detaching them. Controls and sight bubble located in superstructure cab. Four outrigger extension lengths are provided with corresponding "RATED LIFTING CAPACITIES" for crane duty in confined areas.

Min. Extension
Mid. Extension
Mid. Extension
Mid. Extension
Mid. Extension
Mid. Extension
Max. Extension

8' 1-5 / 8" (2.48 m) center to center (5.0 m) center to center (6.5 m) center to center (6.5 m) center to center (7.0 m) center to center

Fin and tube core thermostat controlled

Float size(Diameter) 1' 7-11 / 16"(0.5 m)

### **ENGINE**

LINGINE	
Model	Cummins QSB6.7 EPA)Tier4 Final
Type	Direct injection diesel
No. of cylinders	6
Combustion	4 cycle, turbo charged and after cooled
BoreXStroke, in.(mm)	4.212 X 4.882 (107 X 124)
Displacement, cu. in (liters)	409 (6.700)
Air inlet heater	24 volt preheat
Air cleaner	Dry type, replaceable element
Oil filter	Full flow with replaceable element
Fuel filter	Full flow with replaceable element
Fuel tank, gal.(liters)	79.2 (300), right side of carrier
Cooling	Liquid pressurized, recirculating by-pass

radiator	i iii aila tabo coro, trorritoctat corti cilca
Fan, in.(mm)	Suction type, 9-blade, 28 (711) dia.
Starting	24 volt
Charging	24 volt system, negative ground
Battery	2-120 amp. Hour
Compressor, air, CFM(I /min)	17.0 CFM (481) at 2,400rpm
Horsepower (kW)	Gross 270 (201) at 2,000rpm
Torque, Max. ft-lb (Nm)	730(990) at 1,500rpm
Capacity, gal.(liters)	
Cooling water	2.7 (10)
Lubrication	4.0 (15)
Fuel	79.2 (300)
DEF/AdBlue	10.0(38)

• • • • •

Radiator

## STANDARD EQUIPMENT

- Four section full power synchronized boom 35.1' ~ 113.9' (10.7 m ~ 34.7 m)
- 28.9' or 50' (8.8 m or 15.2 m) bi-fold lattice jib (tilt type) with 5°, 25° or 45° pinned offsets and self storing pins.
- Quick reeving type bi-fold jib
- Anti-Two block device (overwind cutout)
- Mirror for main and auxiliary hoists
- Work lights
- Variable speed main hoist with grooved drum, cable follower, drum rotation indicator (audible, visible and thumper type) and 633' of 3 / 4" cable.
- Variable speed auxiliary hoist with grooved drum, cable follower, drum rotation indicator (audible, visible and thumper type) and 361' of 3 / 4" cable.
- Auxiliary lifting sheave (single top) stowable
- 6.2 ton (5.6 metric ton) hook with swivel
- Tadano twin slewing system and 360° positive slewing lock
- Positive control
- Hydraulic oil cooler
- 3 way adjustable cloth seat with armrests, high back and seat belt
- Tilt-telescoping steering wheel
- Tinted safety glass and sun visor
- Front windshield wiper and washer
- Roof window wiper and washer
- Power window (cab door )
- Cigarette lighter and ashtray
- Cab floor mat
- Pump disconnect in operator's cab
- Air conditioner (hot water heater and cooler)
- Full instrumentation package
- Self centering finger control levers with pilot control
- Control pedals for boom elevating and boom telescoping
- Low oil pressure / high water temp. warning device (visual)
- Rear steer centering light
- Air cleaner dust indicator

- Tadano electronic load moment indicator system (AML-C)
- Boom angle indicator
- Outrigger extension length detector
- Electronic crane monitoring system
- Rear view mirrors (right and left side)
- Fenders
- Air dryer
- Complete highway light package
- Towing hooks-Front and rear
- Hook block tie down (front bumper)
- Weighted hook storage compartment
- Halogen head lamp
- Independently controlled outriggers
- Four outrigger extension positions
- Self-storing outrigger pads
- Electronic controlled automatic transmission driven by torque converter
- 4 X 4 X 4 drive/steer
- Non-spin rear differential
- Semi-elliptic leaf springs suspension with hydraulic lockout device (front and rear)
- 23.5-25 (OR) tires
- Disc brakes
- Water separator with filter(high filtration)
- Back-up alarm
- 24 volt electric system
- Tool storage compartment
- Tire inflation kit
- Cummins QSB6.7 turbo charged after cooled engine (270 HP) with exhaust brake
- Engine over-run alarm
- Lifting eyes
- Telematics(machine data logging and monitoring system) with HELLO-NET via internet (availability depends on countries)
- Fuel consumption monitor
- Eco mode system
- Radiator cover
- OPTIONAL EQUIPMENT
   55 ton (50.0 metric ton) 5 sheave with swivel hook and safety latch for 3 / 4"(19 mm) wire rope
- Wind speed indicator
- Emergency steering system

- Over unwinding prevention
- Engine oil pan heater
- Engine coolant heater

## HOISTING PERFORMANCE

### **LINE SPEEDS AND PULLS**

	Main or auxi	iliary hoist - 1	14-1 / 4" (0.3	862 m) drum			
Layer	Line s	peeds <sup>1</sup>	Line	bulls help help help help help help help help			
,			Avail	bulls hable			
	F.P.M	m / min	Lbs.	kgf			
1st	331	101	16,500				
2nd	361	110	15,200	6,900			
3rd	390	119	13,800	6,260			
4th	420	128	12,700	5,760			
5th	450	137	11,900	5,400			
6th	479	146	11,000	4,990			
7th <sup>3</sup>	509	155	10,300	4,670			

- Maximum permissible line pull wire strength 15,600 lbs(7,085 kg) with 6 X 31 class rope.

<sup>1</sup> Line speeds based only on hook block, not loaded.

Developed by machinery with each layer of wire rope, but not based on rope strength or other limitation in machinery or equipment.

Seventh layer of wire rope are not recommended for hoisting operations.


## DRUM WIRE ROPE CAPACITIES

Wire	Main a	and auxiliary dı		agging						
rope	3 / 4" (19 mm) wire rope									
	Rope p	er layer	Total w	ire rope						
layer	Feet	Meters	Feet	Meters						
1	112.2	34.2	112.2	34.2						
2	122.3	37.3	234.5	71.5						
3	132.2	40.3	366.8	111.8						
4	142.3	43.4	509.1	155.2						
5	152.2	46.4	661.4	201.6						
6	162.4	49.5	823.8	251.1						
7	172.5	52.6	996.4	303.7						


### **DRUM DIMENSIONS**

	Inch	mm
• • • • • • • • • • • • • • • • • • • •	14-1 / 4"	362
•••••	23-5 / 8"	600
• • • • • • • • • • • • • • • • • • • •	25-7 / 8"	657

## **GR-550XL WORKING RANGE CHART**

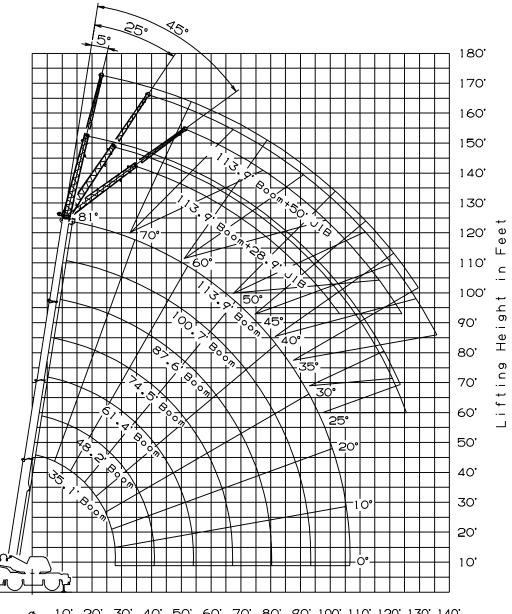

Load Radius from Axis of Rotation in Feet

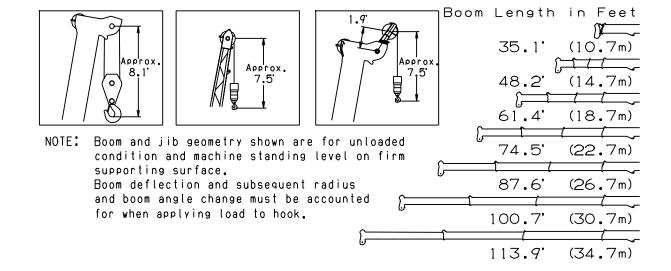

• • • •

## **GR-550XL RATED LIFTING CAPACITIES** (IN POUNDS)

	ON OUTRIGGERS FULLY EXTENDED 22' 11-5 / 8"(7.0 m) SPREAD														
	360° ROTATION														
_ A	3	35.1 48.2 61.4 74.5 87.6 100.7 113.9													
В	С	(10.7 m)	С	(14.7 m)	С	(18.7 m)	С	(22.7 m)	С	(26.7 m)	С	(30.7 m)	С	(34.7 m)	
8	70	110,000													
10	66	100,600	73	46,700	77	46,700	80	44,300							
12	63	87,900	70	46,700	75	46,700	78	44,300	81	41,200					
15	56	73,400	67	46,700	72	46,700	76	44,300	79	40,300	81	33,000			
20	44	54,400	60	46,700	67	46,700	72	42,100	76	35,800	78	30,500	80	25,100	
25	27	38,500	52	43,000	62	43,000	68	39,500	72	31,700	75	27,300	78	23,900	
30			44	33,800	56	35,000	64	35,500	69	28,700	72	25,000	75	21,600	
35			33	25,600	50	26,600	59	27,000	65	25,300	69	23,000	72	19,900	
40			16	20,400	44	21,100	54	21,500	61	21,200	66	20,500	70	19,000	
45					36	17,100	49	17,300	57	17,500	63	17,400	67	17,100	
50					25	14,100	43	14,300	53	14,500	59	14,400	64	14,500	
55							37	12,000	48	12,200	56	12,100	61	12,200	
60							29	10,200	43	10,300	52	10,300	58	10,350	
65							18	8,700	38	8,750	48	8,850	54	8,850	
70									32	7,550	44	7,600	51	7,650	
75									24	6,550	39	6,600	47	6,650	
80									9	5,700	34	5,700	44	5,750	
85											27	4,950	39	5,000	
90											19	4,350	35	4,350	
95													30	3,750	
100													23	3,250	
105													13	2,350	
D		·		·				0	·	·		·	·		

LIF	LIFTING CAPACITIES AT ZERO DEGREE BOOM ANGLE ON OUTRIGGERS FULLY EXTENDED													
	22' 11-5 / 8"(7.0 m) SPREAD 360° ROTATION													
A	35	5.1	48	3.2	61	.4	74	.5	87	.6	100	0.7	113	3.9
C	C B (10.7 m) B (14.7 m) B (18.7 m) B (22.7 m) B (26.7 m) B (30.7 m) B (34.7 m)											(34.7 m)		
0	27.8	16,500	41.0	10,600	54.1	7,000	67.3	4,800	80.2	3,300	92.7	2,200	105.4	1,400

	ON OUTRIGGERS MID EXTENDED 21' 3-7 / 8"(6.5 m) SPREAD														
	360° ROTATION														
_ A	35	5.1	4	8.2	6	1.4		4.5	8	7.6	10	00.7	11	13.9	
В	С	(10.7 m)	С	(14.7 m)	С	(18.7 m)	С	(22.7 m)	С	(26.7 m)	С	(30.7 m)	С	(34.7 m)	
8	70	110,000													
10	66	100,600	73	46,700	77	46,700	80	44,300							
12	63	87,900	70	46,700	75	46,700	78	44,300	81	41,200					
15	56	73,400	67	46,700	72	46,700	76	44,300	79	40,300	81	33,000			
20	44	54,400	60	46,700	67	46,700	72	42,100	76	35,800	78	30,500	80	25,100	
25	27	38,500	52	40,600	62	41,300	68	39,500	72	31,700	75	27,300	78	23,900	
30			44	28,300	56	29,000	64	29,500	69	28,700	72	25,000	75	21,600	
35			33	21,000	50	21,600	59	22,100	65	22,400	69	22,500	72	19,900	
40			16	16,300	43	17,000	54	17,300	61	17,500	66	17,600	70	17,700	
45					35	13,700	49	14,000	57	14,100	62	14,300	67	14,200	
50					25	11,100	43	11,500	53	11,700	59	11,800	64	11,700	
55							37	9,500	48	9,700	55	9,900	60	9,800	
60							29	8,000	43	8,200	52	8,300	57	8,200	
65							18	6,500	38	7,000	48	7,000	54	7,000	
70									32	5,900	43	5,900	50	6,000	
75									24	5,000	39	5,000	47	5,100	
80									9	4,000	33	4,300	43	4,400	
85											27	3,700	39	3,700	
90											19	2,900	35	3,100	
95													29	2,700	
100													23	2,200	
105													12	1,650	
D								0							

L	LIFTING CAPACITIES AT ZERO DEGREE BOOM ANGLE ON OUTRIGGERS MID EXTENDED													
	21' 3-7 / 8"(6.5 m) SPREAD 360° ROTATION													
A	35	5.1	48	3.2	61	.4	74	.5	87	.6	100	0.7	113	3.9
C B (10.7 m) B (14.7 m) B (18.7 m) B (22.7 m) B (26.7 m) B (30.7 m) B (34.7 m)											(34.7 m)			
0	27.8	16,500	41.0	10,600	54.1	7,000	67.3	4,800	80.2	3,300	92.7	2,200	105.4	1,400

- A:Boom length in feet
- B:Load radius in feet
- **C** :Loaded boom angle (°)
- **D** :Minimum boom angle (°) for indicated length (no load)

NOTE: The lifting capacity data stored in the LOAD MOMENT INDICATOR (AML-C) is based on the standard number of parts of line listed in the chart.

Standard number of parts of line for each boom length should be according to the following table.

Boom length in feet	35.1'	35.1' to 61.4'	61.4' to 113.9'	Single top
(meters)	(10.7 m)	(10.7 m to 18.7 m)	(18.7 m to 34.7 m)	Jib
Number of parts of line	10	6	4	1

## **GR-550XL RATED LIFTING CAPACITIES** (IN POUNDS)

		C	ON OUTRIGGERS MID EXTENDED 16' 4-7 / 8"(5.0 m) SPREAD														
	360° ROTATION  A 35.1 48.2 61.4 74.5 87.6 100.7 113.9																
A	35.1 48.2 61.4 74.5 87.6 100.7																
В	С	(10.7 m)	С	(14.7 m)	С	(18.7 m)	С	(22.7 m)	С	(26.7 m)	С	(30.7 m)	С	(34.7 m)			
8	70 110,000																
10	66	100,600	73	46,700	77	46,700	80	44,300									
12	63	87,900	70	46,700	75	46,700	78	44,300	81	41,200							
15	56	72,400	67	46,700	72	46,700	76	44,300	79	40,300	81	33,000					
20	44	38,500	60	39,900	67	40,700	72	41,400	76	35,800	78	30,500	80	25,100			
25	27	24,600	52	26,000	62	26,600	68	27,200	72	27,500	75	27,200	78	23,900			
30			44	18,600	56	19,000	63	19,500	68	19,800	72	19,900	75	19,600			
35			33	13,700	50	14,400	59	14,800	65	15,000	69	15,000	72	15,100			
40			16	10,400	43	11,200	54	11,700	61	11,900	65	11,900	69	11,900			
45					35	8,800	49	9,300	57	9,500	62	9,500	66	9,600			
50					25	7,000	43	7,500	53	7,700	59	7,700	63	7,800			
55							37	6,000	48	6,150	55	6,150	60	6,300			
60							29	4,850	43	5,000	51	5,000	57	5,100			
65							18	3,700	38	4,050	47	4,050	54	4,150			
70	32 3,300 43 3,300												50	3,400			
75									24	2,650	38	2,700	47	2,800			
80									9	2,000	33	2,100	43	2,200			
85	•				•		•				27	1,600	39	1,700			
90	•				•		•				18	1,050	34	1,300			
D	•	•			•	C	)			•	•		•	• • • •			

LIF	LIFTING CAPACITIES AT ZERO DEGREE BOOM ANGLE ON OUTRIGGERS MID EXTENDED												
	16' 4-7 / 8"(5.0 m) SPREAD 360° ROTATION												
_ A	A 35.1 48.2				61	61.4 74.5			87	87.6		0.7	
c	B (10.7 m) B (14.7 m) B (18.7 m) B (22.7 m) B (26.7 m) B (30.7 m)												
0	27.8	16,500	41.0	9,900	54.1	5,670	67.3	3,480	80.2	1,980	92.7	900	

	ON OUTRIGGERS MIN EXTENDED 8' 1-5 / 8"(2.48 m) SPREAD													
	360° ROTATION													
A	3	5.1	4	8.2	61.4		74.5		87.6		100.7		1	13.9
В	С	(10.7 m)	С	(14.7 m)	С	(18.7 m)	С	(22.7 m)	С	(26.7 m)	С	(30.7 m)	С	(34.7 m)
8	70	75,800												
10	66	48,500	73	46,700	77	46,700	80	44,300						1
12	62	34,100	70	35,900	75	35,700	78	34,900	80	33,600				
15	56	22,600	67	24,100	72	24,800	76	24,700	78	23,900	80	23,000		
20	45	13,000	60	14,300	67	14,900	72	15,400	75	15,100	77	14,600	79	13,900
25	29	8,050	52	9,200	62	9,700	67	10,200	71	10,400	74	10,000	76	9,500
30			44	6,100	56	6,600	63	7,000	68	7,200	71	7,000	74	6,700
35			33	3,900	50	4,400	59	4,800	64	5,000	68	5,000	71	4,700
40			17	2,500	43	2,900	54	3,300	60	3,500	65	3,500	68	3,300
45					35	1,800	49	2,100	56	2,300	61	2,400	65	2,200
50							43	1,200	52	1,400	58	1,500	62	1,400
D				0				••		••••		••••		• • • •

LIF	LIFTING CAPACITIES AT ZERO DEGREE BOOM ANGLE ON OUTRIGGERS MIN EXTENDED										
8' 1-5 / 8"(2.48 m) SPREAD 360° ROTATION											
A	A 35.1 48.2										
C \	B (10.7 m) B (14.7 m)										
0	0 27.8 6,040 41.0 2,120										

- A :Boom length in feet
- B:Load radius in feet
- **C**:Loaded boom angle (°)
- **D** :Minimum boom angle (°) for indicated length (no load)

NOTE: The lifting capacity data stored in the LOAD MOMENT INDICATOR (AML-C) is based on the standard number of parts of line listed in the chart.

Standard number of parts of line for each boom length should be according to the following table.

Boom length in feet	35.1'	35.1' to 61.4'	61.4' to 113.9'	Single top
(meters)	(10.7 m)	(10.7 m to 18.7 m)	(18.7 m to 34.7 m)	Jib
Number of parts of line	10	6	4	1

# **GR-550XL RATED LIFTING CAPACITIES** (IN POUNDS)

## ON OUTRIGGERS FULLY EXTENDED 22' 11-5 / 8"(7.0 m) SPREAD 360° ROTATION

35

134.4

1,400

		113.9' (34.7 m) Boom + 28.9' (8.8 m) Jib											
С	5°	Tilt	25°	Tilt	45°	Tilt							
	R	W	R	W	R	W							
80	25.6	12,300	34.8	8,400	41.5	6,050							
77.5	32.9	12,000	41.3	8,000	47.3	5,900							
75	39.8	11,500	47.5	7,650	53.1	5,700							
72.5	46.3	10,600	53.6	7,350	58.7	5,550							
70	52.3	9,750	59.5	7,100	64.0	5,400							
67.5	58.3	9,100	65.1	6,850	69.2	5,300							
65	64.0	8,500	70.5	6,600	74.0	5,200							
62.5	69.4	7,900	75.6	6,400	78.9	5,100							
60	74.8	7,400	80.5	6,200	83.7	5,050							
57.5	79.5	6,500	85.5	5,700	88.2	5,000							
55	84.0	5,650	90.0	5,200	92.5	4,950							
52.5	88.8	5,000	94.1	4,600	96.2	4,450							
50	93.1	4,400	98.2	4,100	99.7	3,950							
47.5	97.4	3,950	102.1	3,700	103.3	3,550							
45	101.4	3,500	105.6	3,300	106.6	3,150							
42.5	105.3	3,150	109.1	2,950									
40	109.0	2,800	112.3	2,650									
37.5	112.6	2,500	115.5	2,400									
35	115.8	2,250	118.2	2,200									
32.5	118.7	2,050	120.9	2,000									
30	121.6	1,850	123.3	1,800									
			_										

125.3

127.1

1,650

1,550

	113.9' (34.7 m) Boom + 50' (15.2 m) Jib										
С	5°	Tilt	25°	' Tilt	45°	Tilt					
	R	W	R	W	R	W					
80	32.6	6,350	47.6	4,050	59.0	2,750					
77.5	40.8	6,200	54.9	3,900	65.3	2,700					
75	48.6	6,050	61.9	3,700	71.6	2,600					
72.5	56.0	5,600	68.5	3,550	77.5	2,550					
70	63.0	5,200	75.0	3,350	83.2	2,500					
67.5	69.6	4,900	81.2	3,200	88.7	2,450					
65	76.1	4,600	87.0	3,100	93.9	2,400					
62.5	82.2	4,350	92.6	3,000	98.9	2,350					
60	88.4	4,150	98.1	2,900	103.8	2,350					
57.5	94.4	3,950	103.6	2,800	108.4	2,300					
55	100.0	3,800	108.7	2,700	112.6	2,300					
52.5	105.4	3,500	113.3	2,650	116.7	2,250					
50	110.2	3,150	117.9	2,600	120.3	2,250					
47.5	114.8	2,750	121.9	2,400	124.0	2,200					
45	119.3	2,400	125.7	2,150	127.1	2,100					
42.5	123.3	2,100	129.3	1,900							
40	127.0	1,850	132.7	1,700							
37.5	131.1	1,600	135.7	1,500							

138.5

1,300

**C** :Loaded boom angle (°) **R** :Load radius in feet

124.1

126.3

1,700

1,600

27.5

W :Rated lifting capacity in pounds

# **GR-550XL RATED LIFTING CAPACITIES** (IN POUNDS)

## ON OUTRIGGERS MID EXTENDED 21' 3-7 / 8"(6.5 m) SPREAD 360° ROTATION

_		113.9' (34.7 m) Boom + 28.9' (8.8 m) Jib											
С	5°	Tilt	25°	Tilt	45° Tilt								
	R	W	R	W	R	W							
80	25.6	12,300	34.8	8,400	41.5	6,050							
77.5	32.9	12,000	41.3	8,000	47.3	5,900							
75	39.8	11,500	47.5	7,650	53.1	5,700							
72.5	46.3	10,600	53.6	7,350	58.7	5,550							
70	52.3	9,750	59.5	7,100	64.0	5,450							
67.5	58.1	8,800	65.1	6,850	69.2	5,300							
65	63.5	7,900	70.5	6,600	74.0	5,200							
62.5	68.7	6,800	75.3	5,800	78.9	4,950							
60	73.6	5,800	79.9	5,050	83.5	4,700							
57.5	78.5	5,100	84.6	4,450	87.8	4,250							
55	83.3	4,500	89.0	3,850	91.8	3,850							
52.5	87.9	3,900	93.4	3,300	95.7	3,350							
50	92.5	3,300	97.4	2,850	99.3	2,900							
47.5	96.7	2,800	101.4	2,450	102.9	2,450							
45	100.7	2,350	105.0	2,100	106.2	2,050							
42.5	104.3	2,000	108.5	1,800									
40	108.3	1.650	111.8	1.550									

115.0

117.9

1,300

1,100

С		113.9' (34	.7 m) Boo	m + 50' (1	5.2 m) Jib		
_ C	5°	Tilt	25°	Tilt	45° Tilt		
	R	W	R	W	R	W	
80	32.6	6,350	47.6	4,050	59.0	2,750	
77.5	40.8	6,200	54.9	3,900	65.3	2,700	
75	48.6	6,050	61.9	3,700	71.6	2,600	
72.5	56.0	5,600	68.5	3,550	77.5	2,550	
70	63.0	5,200	75.0	3,350	83.2	2,500	
67.5	69.6	4,900	81.2	3,200	88.7	2,450	
65	76.1	4,600	87.0	3,100	93.9	2,400	
62.5	82.2	4,350	92.6	3,000	98.9	2,350	
60	88.3	4,100	98.1	2,900	103.8	2,350	
57.5	93.8	3,550	103.5	2,700	108.4	2,300	
55	99.0	3,000	108.4	2,500	112.6	2,300	
52.5	104.0	2,450	112.9	2,150	116.4	2,000	
50	108.8	2,000	117.1	1,800	119.9	1,750	
47.5	113.6	1,700	121.2	1,500	123.4	1,450	
45	118.0	1,400	124.9	1,200	126.4	1,150	

## ON OUTRIGGERS MID EXTENDED 16' 4-7 / 8"(5.0 m) SPREAD 360° ROTATION

		113.9' (34.7 m) Boom + 28.9' (8.8 m) Jib										
С	5°	Tilt	25°	Tilt	45° Tilt							
	R	W	R	W	R	W						
80	25.6	12,300	34.8	8,400	41.5	6,050						
77.5	32.9	12,000	41.3	8,000	47.3	5,900						
75	39.8	11,500	47.5	7,650	53.1	5,700						
72.5	45.7	9,700	53.4	7,000	58.7	5,550						
70	51.3	7,900	58.9	6,300	64.0	5,400						
67.5	56.9	6,550	64.4	5,450	68.9	4,850						
65	62.2	5,300	69.2	4,700	73.4	4,350						
62.5	67.3	4,300	74.0	3,850	78.0	3,650						
60	72.3	3,400	78.8	3,150	82.6	3,000						
57.5	77.0	2,750	83.4	2,550	86.8	2,450						
55	81.8	2,200	87.9	2,000	90.8	2,000						
52.5	86.4	1,700	92.3	1,550	94.8	1,550						
50	91.0	1,300	96.4	1,150	98.5	1,200						

C	113.9' (34.7 m) Boom + 50' (15.2 m) Jib										
	5°	Tilt	25°	Tilt	45° Tilt						
	R	W	R	W	R	W					
80	32.6	6,350	47.6	4,050	58.8	2,750					
77.5	40.8	6,200	54.9	3,900	65.3	2,700					
75	48.6	6,050	61.9	3,700	71.6	2,600					
72.5	56.0	5,600	68.5	3,550	77.5	2,550					
70	63.0	5,200	75.0	3,350	83.2	2,500					
67.5	69.1	4,500	81.0	3,100	88.7	2,450					
65	75.1	3,800	86.6	2,850	93.7	2,400					
62.5	90.9	3,050	91.9	2,400	98.6	2,150					
60	86.1	2,400	97.1	1,950	103.3	1,900					
57.5	91.6	1,800	102.1	1,500	107.5	1,500					
55	96.7	1,300	106.7	1,100	111.6	1,100					

 $\boldsymbol{C}$  :Loaded boom angle (°)

R :Load radius in feet

37.5

35

111.7

115.1

1,400

1,200

 $\boldsymbol{W}$  :Rated lifting capacity in pounds

## WARNING AND OPERATING INSTRUCTIONS FOR LIFTING CAPACITIES

#### **GENERAL**

- RATED LIFTING CAPACITIES apply only to the machine as originally manufactured and normally equipped by TADANO LTD. Modifications to the machine or use of optional equipment other than that specified can result in a reduction of capacity.
- Hydraulic cranes can be hazardous if improperly operated or maintained. Operation and maintenance of this machine must be in compliance with information in the *Operation and Maintenance Manual* supplied with the crane. If this manual is missing, order a replacement through the distributor.
- The operator and other personnel associated with this machine shall fully acquaint themselves with the latest American National Standards Institute (ANSI) safety standards for cranes.

#### **SET UP**

- Rated lifting capacities on the load chart are the maximum allowable crane capacities. They are based on the machine standing level on firm supporting surface under ideal job conditions. Depending on the nature of the supporting surface, it may be necessary to have structural supports under the outrigger floats or tires to spread the loads to a larger surface.
- 2. For outrigger operation, outriggers shall be properly extended with tires free of supporting surface before operating crane.

#### **OPERATION**

- Rated lifting capacities have been tested to and meet minimum requirements of SAE J1063-Cantilevered Boom Crane Structures Method of Test.
- Rated lifting capacities do not exceed 85 % of the tipping load on outriggers fully extended as determined by SAE J765-Crane Stability Test Code.
   Rated lifting capacities for partially extended outriggers are determined from the formula, Rated Lifting Capacities =(Tipping Load - 0.1 x Tip Reaction) / 1.25.
- Rated lifting capacities above bold lines in the chart are based on crane strength and those below, on its stability. They are based on actual load radius increased by boom deflection.
- 4. The weight of handling device such as hook blocks, slings, etc., must be considered as part of the load and must be deducted from the lifting capacities.
- 5. Rated lifting capacities are based on freely suspended loads and make no allowance for such factors as the effect of wind, sudden stopping of loads, supporting surface conditions, inflation of tires, operating speeds, side loads, etc. Side pull on the boom or jib is extremely dangerous.
- 6. Rated lifting capacities do not account for wind on lifted load or boom. We recommend against working under the condition that the load is out of control due to a strong wind. During boom lift, consider that the rated lifting capacity is reduced by 50 % when the wind speed is 20 mph(9 m/s) to 27 mph(12 m/s); reduced by 70 % when the wind speed is 27 mph(12 m/s) to 31 mph(14m/s). If the wind speed is 31mph(14 m/s) or over, stop operation. During jib lift, stop operation if the wind speed is 20mph(9m/s).
- 7. Rated lifting capacities at load radius shall not be exceeded. Do not tip the crane to determine allowable loads.
- 8. Do not operate at boom lengths, radii, or boom angle, where no capacities are shown. Crane may overturn without any load on the hook.

- When boom length is between values listed, refer to the rated lifting capacities of the next longer and next shorter booms for the same radius. The lesser of the two rated lifting capacities shall be used.
- When making lifts at a load radius not shown, use the next longer radius to determine allowable capacity.
- 11. Load per line should not exceed 12,300 lbs. (5,600 kg) for main hoist and auxiliary hoist.
- 12. Check the actual number of parts of line with LOAD MOMENT INDICATOR (AML-C) before operation. Maximum lifting capacity is restricted by the number of parts of line of LOAD MOMENT INDICATOR (AML-C). Limited capacity is as determined from the formula, Single line pull for main hoist 12,300 lbs.(5,600 kg) x number of parts of line.
- 13. The boom angle before loading should be greater to account for deflection. For rated lifting capacities, the loaded boom angle and the load radius is for reference only.
- 14. The 35.1' (10.7 m) boom length capacities are based on boom fully retracted. If not fully retracted [less than 48.2'(14.7 m) boom length], use the rated lifting capacities for the 48.2' (14.7 m) boom length.
- 15. Extension or retraction of the boom with loads may be attempted within the limits of the RATED LIFTING CAPACITIES. The ability to telescope loads is limited by hydraulic pressure, boom angle, boom length, crane maintenance, etc.
- 16. For lifting capacity of single top, reduce the rated lifting capacities of relevant boom according to a weight reductions for auxiliary load handling equipment. Capacities of single top shall not exceed 12,300 lbs. (5,600 kg) including main hook.
- When base jib or top jib or both jib removing, jib state switch select removed.
- 18. When erecting and stowing jib, be sure to retain it by hand or by other means to prevent its free movement.
- Use "ANTI-TWO BLOCK" disable switch when erecting and stowing jib and when stowing hook block. While the switch is pushed, the hoist does not stop, even when overwind condition occurs.
- 20. For boom length with 28.9' (8.8 m) jib, rated lifting capacities are determined by loaded boom angle only in the column headed "113.9' (34.7 m) boom + 28.9' (8.8 m) jib". For boom length with 50' (15.2 m) jib, rated lifting capacities are determined by loaded boom angle only in the column headed "113.9' (34.7 m) boom + 50' (15.2 m) jib". For angles not shown, use the next lower loaded boom angle to determine allowable capacity.
- 21. When lifting a load by using jib (aux. winch) and boom (main winch) simultaneously, do the following:
  - Enter the operation status as jib operation, not as boom operation.
  - Before starting operation, make sure that mass of load is within rated lifting capacity for jib.

#### **DEFINITIONS**

- Load Radius: Horizontal distance from a projection of the axis
  of rotation to supporting surface before loading to the center of
  the vertical hoist line or tackle with load applied.
- Loaded Boom Angle: The angle between the boom base section and the horizontal, after lifting the rated lifting capacity at the load radius.
- Working Area: Area measured in a circular arc about the centerline of rotation.
- 4. Freely Suspended Load: Load hanging free with no direct external force applied except by the hoist line.
- Side Load: Horizontal side force applied to the lifted load either on the ground or in the air.

# **GR-550XL RATED LIFTING CAPACITIES** (IN POUNDS)


	ON RUBBER STATIONARY												
			Ove	r Front			360• •Rotation						
A	3	35.1 61.4 87.6		37.6		35.1		61.4			87.6		
В	С	(10.7 m)	С	(18.7 m)	С	(26.7 m)		С	(10.7 m)	С	(18.7 m)	С	(26.7 m)
10	66	48,300						66	27,200				
12	62	41,800						62	22,500				
15	56	34,300	72	30,500				56	16,300	72	16,300		
20	45	26,000	67	23,300				45	9,200	67	10,700		
25	29	18,100	62	18,300	71	13,400		30	5,500	62	6,800	71	7,500
30			56	13,900	68	11,000				56	4,600	68	5,000
35			50	10,700	64	9,200				50	2,900	64	3,500
40			43	8,300	60	7,900				43	1,800	60	2,200
45			35	6,500	57	6,900				35	1,000	56	1,400
50			25	5,100	52	5,500							
55					48	4,400							
60					43	3,600							
65					38	2,800							
70					31	2,200							
75					23	1,700							
80					9	1,300							
D									0		28		53

	LIFTING CAPACITIES AT ZERO DEGREE BOOM ANGLE ON RUBBER STATIONARY									
Over Front 360° Rotation										
\ A	3	35.1 61.4 87.6					3	35.1		
C /	В	(10.7 m)	В	(18.7 m)	В	(26.7 m)		C	(10.7 m)	
0	27.8	15,500	54.1	4,100	80.2	1,190		27.8	4,050	

ON RUBBER CREEP							
	Over Front						
\ A	35.1		(	61.4		37.6	
В	С	(10.7 m)	<b>C</b> (18.7 m)		С	(26.7 m)	
10	66	35,600					
12	62	30,500					
15	56	24,700	72	26,000			
20	45	18,300	67	19,400			
25	29	13,900	62	15,200	71	13,400	
30			56	12,100	68	11,000	
35			50	9,600	64	9,200	
40			43	7,700	60	7,900	
45			35	6,200	57	6,900	
50			25	5,100	52	5,500	
55					48	4,400	
60					43	3,600	
65					38	2,800	
70					31	2,200	
75					23	1,700	
80					9	1,300	
D	0						

A:Boom le	ength	in	feet
-----------	-------	----	------

- B:Load radius in feet
- **C**:Loaded boom angle (°)
- **D** :Minimum boom angle (°) for indicated length (no load)



	LIFTI	NG CAPACITIES AT ZERO DEGREE BOOM ANGLE						
	ON RUBBER CREEP							
		Over Front						
	\ A	3	5.1	6	61.4	87.6		
<b>C B</b> (10.7 m)		В	(18.7 m)	В	(26.7 m)			
	0	27.8	12,000	54.1	4,100	80.2	1,190	

NOTE: The lifting capacity data stored in the LOAD MOMENT INDICATOR (AML-C) is based on the standard number of parts of line listed in the chart.

Standard number of parts of line for on rubber operation should be according to the following table.

Boom length in feet	• • • • • • • • • • • • • • • • • • • •	35.1' to 87.6'		l
(meters)		(10.7 m to 26.7 m)		
Number of parts of line	••	4	••	

•••••

## WARNING AND OPERATING INSTRUCTIONS FOR ON RUBBER LIFTING CAPACITIES

- Rated lifting capacities on rubber are in pounds and do not exceed 75 % of tipping loads as determined by SAE J765-Crane Stability Test Code.
- Rated lifting capacities shown in the chart are based on condition that crane is set on firm level surfaces with axle oscillation lockout applied. Those above bold lines are based on tire capacity and those below, on crane stability. They are based on actual load radius increased by tire deformation and boom deflection.
- If the suspension lock cylinders contain air, the axle will not be locked completely and rated lifting capacities may not be obtainable. Bleed the cylinders according to the operation safety and maintenance manual.
- Rated lifting capacities are based on proper tire inflation, capacity and condition. Damaged tires are hazardous to safe operation of crane
- 5. Tires shall be inflated to correct air pressure.

Tires	Air Pressure		
23.5-25	65 psi (450 kPa)		

- Over front operation shall be performed within two degrees in front of chassis
- On rubber lifting with "jib" is not permitted. Maximum permissible boom length is 87.6 ft. (26.7 m).
- 8. When making lift on rubber stationary, set parking brake.
- For creep operation, boom must be centered over front of machine, slewing lock engaged, and load restrained from slewing. Travel slowly and keep the lifted load as close to the ground as possible, and especially avoid any abrupt steering, accelerating or braking.
- 10. Do not operate the crane while carrying the load.
- 11. Creep is motion for crane not to travel more than 200 ft. (60 m) in any 30 minute period and to travel at the speed of less than 1 mph (1.6 km/h).

## WARNING AND OPERATING INSTRUCTIONS FOR USING THE LOAD MOMENT INDICATOR (AML-C)

- Set AML select keys in accordance with the actually operating crane conditions and don't fail to make sure, before crane operation, that the displays on front panel are correct.
- 2. When operating crane on outriggers:
  - · Set P.T.O. switch to "ON".
  - Press the outrigger state select key to register for the outrigger operation. If the display agrees with the actual state, press the set key to register. After the completion of the registration, the pop-up window closes.
  - Press the lift state select key to register the lift state to be used (single top / jib / boom).
  - Each time the lift state select key is pressed, the display changes. If the display agrees with the actual state, press the set key to register. After the completion of the registration, the pop-up window closes.
  - When erecting and stowing jib, select the status of jib set (Jib lift indicative symbol flickers).
- 3. When operating crane on rubber:
  - Set P.T.O. switch to "ON".
  - Press the outrigger state select key to register for the on rubber operation. Each time the outrigger state select key is pressed, the display changes. Select the creep operation, the on rubber state indicative symbol flickers.
  - Press the lift state select key to register the lift state.

However, pay attention to the following.

- (1) For stationary operation.
  - The front capacities are attainable only when the over front position symbol comes on. When the boom is more than 2 degrees from centered over front of chassis, 360° capacities are in effect.

- When a load is lifted in the front position and then slewed to the side area, make sure the value of the LOAD MOMENT INDICATOR(AML-C) is below the 360° lifting capacity.
- (2) For creep operation.
  - The creep capacities are attainable only when boom is in the straight forward position of chassis and the over front position symbol is on. If boom is not in the straight forward position of chassis, never lift load.
- 4. This machine is equipped with an automatic slewing stop device. (For the details, see Operation and Maintenance Manual.) But, operate very carefully because the automatic slewing stop does not work in the following cases.
  - During on rubber operation.
  - When the "P.T.O." switch is set to "OVERRIDE" and the "OVERRIDE" key switch outside the cab is on.
- During crane operation, make sure that the displays on front panel are in accordance with actual operating conditions.
- 6. The displayed values of LOAD MOMENT INDICATOR (AML-C) are based on freely suspended loads and make no allowance for such factors as the effect of wind, sudden stopping of loads, supporting surface conditions, inflation of tire, operating speed, side loads, etc.
  For safe operation, it is recommended when extending and
  - For safe operation, it is recommended when extending and lowering boom or slewing, lifting loads shall be appropriately reduced.
- 7. LOAD MOMENT INDICATOR (AML-C) is intended as an aid to the operator. Under no condition should it be relied upon to replace use of capacity charts and operating instruction. Sole reliance upon LOAD MOMENT INDICATOR (AML-C) aids in place of good operating practice can cause an accident. The operator must exercise caution to assure safety.

## **GR-550XL Axle weight distribution chart**

		Pounds			Kilograms		
		GVW	Front	Rear	GVW	Front	Rear
Base mach	nine	74,850	38,500	36,350	33,950	17,460	16,490
Remove:	1. 6.2 ton(5.6 metric ton) hook block	-330	-460	130	-150	-209	59
	2. 55 ton(50.0 metric ton) hook block	-1,180	-2,160	980	-534	-980	446
	3. Top jib	-500	-630	130	-227	-286	59
	4. Base jib	-1,380	-2,510	1,130	-626	-1,139	513
	5. Auxiliary lifting sheave	-110	-300	190	-50	-136	86

MEMO		

## TADANO LTD. (INTERNATIONAL DIVISION)

4-12, Kamezawa 2-chome, Sumida-ku, Tokyo 130-0014, JAPAN PHONE: 81-3-3621-7750

FAX: 81-3-3621-7785 http://www.tadano.com

### **TADANO AMERICA CORPORATION**

4242 West Greens Road. Houston, Texas, 77066 U.S.A. PHONE: (281) 869-0030 FAX: (281) 869-0040 http://www.tadanoamerica.com

Form No. GR-550-3-00311 / US-02